



advanced FLOW engineering Instruction Manual P/N: 42-14023

Make: **GM** Model: **2500/3500** Year: **2017-2019** Engine: **V8-6.6L** (td)

Duramax Fuel Pressure: 8-10 PSI (Relay Controlled - supplements factory

fuel pump) Supported Horsepower: 2000+



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
 Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

| Label | Qty. | Description | Part Number |
|----------|------|--|-------------|
| Α | 1 | Fuel Manifold Assembly | 05-60748 |
| В | 1 | Filter, Fuel | 44-FF018 |
| С | 1 | Bowl, Water Separator | 05-60786 |
| D | 1 | Bracket, Frame; Carbon Steel | 05-60788 |
| <u>E</u> | 4 | Bolt, M6 x 1.0 x 50mm | 03-50443 |
| F | 4 | Washer, M6 (Fiber) | 03-50457 |
| G | 4 | Washer M6 | 03-50444 |
| Н | 4 | Locknut, Flanged; M6 | 03-50445 |
| I | 2 | Fitting; 3/8" NPT to AN -8 (Black, Straight) | 05-60685 |
| J | 1 | Harness, Relay | 05-60551 |
| K | 1 | Adapter, Fuse; Add a harness | 05-60583 |
| L | 1 | Hose, Fuel Return | 05-60794 |
| М | 18 | Ties, Nylon Cable, 12" | 05-60167 |
| Ν | 1 | Harness, Power | 05-60632 |
| 0 | 1 | Hose, Fuel Inlet | 05-60792 |
| Р | 1 | Hose, Fuel Outlet | 05-60793 |

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.


- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use





Page 3 aFepower.com



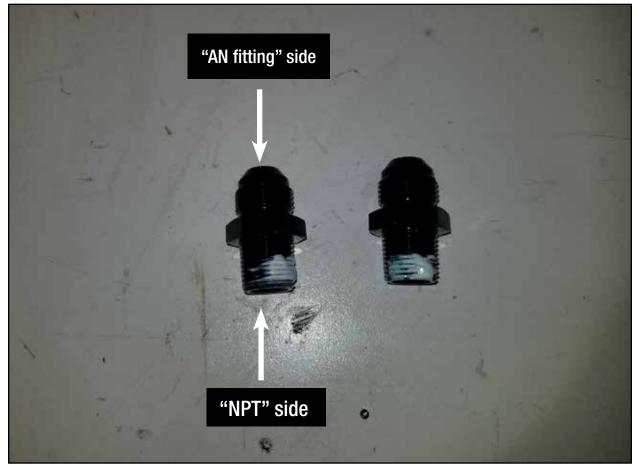

Step 1: Apply Teflon tape with PTFE or Teflon paste with PTFE to the 2 x 3/8" NPT to -8 AN fittings.

NOTE: Only apply Teflon to the NPT side of the fitting.



Step 2: Install the 2 x 3/8" NPT to -8AN fittings into the fuel manifold assembly (as shown above).





Step 3: Mount the supplied fuel manifold assembly to the carbon steel frame bracket using the supplied hardware and tighten.

- (4) M6x1.0 x 50mm bolts
- (4) M6 washers
- (4) M6 fiber washers
- (4) M6 flanged locknuts

NOTE: The fiber washers go between the fuel manifold assembly and the carbon steel bracket.



Step 4: Locate the fuel lines on the driver side near the transmission cross member (shown in picture).





Step 5: Remove the fuel lines from the factory bracket and remove the black line holders from the factory fuel lines (shown above).



Step 6: Remove the factory transfer case skid plate (if applicable). Save hardware and skid plate for reinstallation.





Step 7: Support the transmission cross member with a jack.

Step 8: Remove the driver's side hardware from the transmission cross member and save for reinstallation.



Step 9: Install the fuel manifold assembly and bracket (previously assembled) to the rear side of the transmission crossmember.

Step 10: Make sure to install the factory hardware from the rear of the transmission cross member to the front of the transmission crossmember.





Step 11: Turn the sight glass to the desired angle and using a 1-1/4" wrench, tighten the center nut under the fuel manifold assembly.



Step 12: Install the fuel inlet hose (silver 90° -8 AN fitting) onto the male -8 AN fitting on the fuel inlet port of the fuel manifold assembly.



Page 13

aFepower.com





Step 13: Install the fuel outlet hose (black 90° -8 AN fitting) onto the male -8 AN fitting on the fuel outlet port of the fuel manifold assembly.



Page 14



Step 14: Disconnect the factory fuel feed line using a quick disconnect tool.

NOTE: Tool is available at your local parts store.





Step 15: Install the straight female quick disconnect fitting on the supplied fuel inlet hose (silver 90° -8 AN fitting shown below) onto the male side of the stock fuel feed line.



Page 16



Step 16: Install the male quick disconnect fitting on the supplied fuel outlet hose (black 90° -8 AN fitting shown below) into the female side of the stock fuel feed line.



Page 17

aFepower.com





Step 17: Disconnect the factory fuel return line using a quick disconnect tool.

NOTE: Tool is available at your local parts store.



Step 18: Install the straight female quick disconnect fitting on the fuel return hose (shown below) onto the male connection of the stock fuel return line.



Page 19 aFepower.com





Step 19: Install the straight male quick disconnect fitting on the supplied fuel return hose (shown below) into the female side of the stock fuel return line.

NOTE: Make sure that the line does not kink while making connections.





Step 20: Install the fuel return hose (-4 AN fitting) onto the male -4 AN fitting on the top of the sight glass cover and tighten.



Page 21 aFepower.com





Step 21: Using the supplied nylon cable ties, secure the new hoses (as shown above).



Step 22: Reinstall the factory fuel line retainer bracket.

Step 23: Clip the plastic hose clip into the bracket (circled above).

Step 24: Using the supplied nylon cable ties, secure the new hoses (as shown above).





Step 25: Using the supplied nylon cable ties, secure the new hoses (as shown above).



Step 26: Using a light oil, lube the gasket on the supplied fuel filter and install on the fuel manifold assembly. Thread the supplied water separator bowl into the fuel filter.





Step 27: Reinstall the factory transfer case skid plate using factory hardware.



Step 28: From the inside of the frame, plug the Deutsch connector on the supplied power harness into the mating connector on the fuel pump motor.

- **Step 29:** Route the power harness along the inside of the frame towards the front of the vehicle.
- **Step 30:** Organize the power harness and secure with the supplied nylon cable ties.





Step 31: Run the other end of the power harness along the inside of the frame into the engine compartment.



Step 32: Connect the red wire ring terminal on the power harness to the positive side of the battery.

NOTE: Check the fuse to make sure it is already installed in the connector.





Step 33: Connect the black wire ring terminal on the power harness to the negative side of the battery.



Step 34: Plug the supplied relay harness into the Deutsch connector on the power harness.





Step 35: Secure the relay harness using a supplied cable tie.



Step 36: Attach the power wire from the relay harness to the add a harness fuse adapter.






Step 37: Remove the fuse box cover.

Step 38: Find a 12 volt source inside the fuse box that only comes on with the key in the "run" position. Once a 12 volt source is located, pull fuse from the fuse box.


Locations for inline fuse adapter plug in (underhood fuse block):

2017: Location 41

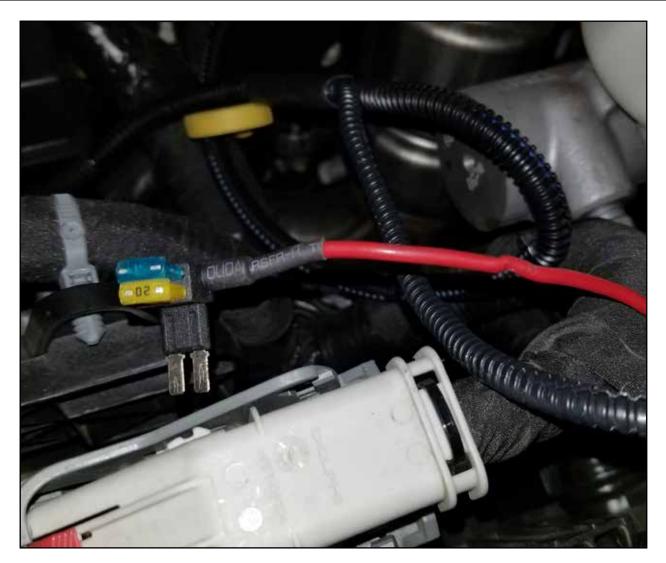


Step 39: Install the fuse removed in Step 38 into the open location on the add a harness fuse adapter (not in line with the wire).



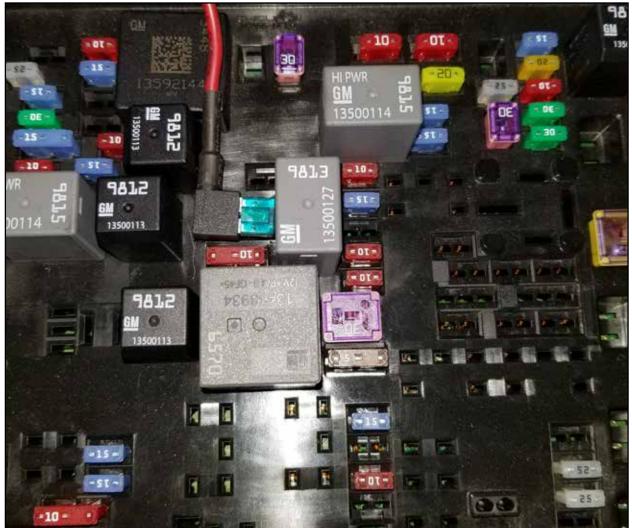

Step 40: Install the add a harness fuse adapter (with installed fuses) into the 12 volt source location chosen in Step 38.

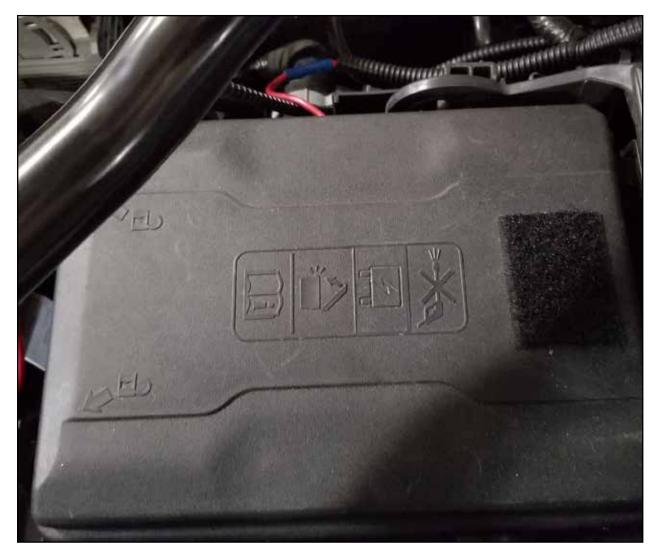

Step 41: Carefully route the power wire outside the fuse box and reinstall the cover (making sure not to pinch the wire).

Step 42: Organize the wire harnesses and secure with the remaining nylon cable ties.





Step 43: Turn the key to the "Run" position and watch to see if the sight glass fills with fuel. If the sight glass does not fill with fuel, use the tank valve (on the top of the sight glass cover) to release any trapped air. If the sight glass still does not fill, try starting the engine.

Step 44: Installation is now complete. Make sure that all fittings are tight and that fuel is not leaking from any of the connections made while installing.

Page left blank intentionally



Page left blank intentionally

Page left blank intentionally



SCORCHER HD Module



P/N: 77-44010

Magnum Force Stage-2 Intake



P/N: 54-12902 (P5R) 51-12902 (PDS) 75-12902 (PG7)

Momentum HD Air Intake system



P/N: 51-74008 (P10R) 51-74008 (PDS)

OE Replacement Filter



P/N: 30-10275 (P5R) 31-10275 (PDS)

5" DP-Back Exhaust



P/N: 49-04087 (w/ Muffler) 49-04087NM (No Muffler)

Sprint Booster V3



P/N: 77-14003

4" DPF-Back Exhaust



P/N: 49-44089-B (Blk. Tips) 49-44089-P (Pol. Tips)

5" DPF-Back Exhaust



P/N: 49-44085-B (Blk. Tip) 49-44085-P (Pol. Tip)

Rear Differential Cover



P/N: 46-70012-WL (w/ 0il) 46-70012 (Black)

DFS FUEL SYSTEM "WORRY FREE" WARRANTY POLICY

Please read this warranty policy before proceeding with the installation of this advanced FLOW engineering, Inc. (aFe) product.

aFe's obligation under the "Worry Free" Warranty is covered for two years from date of purchase. The "Worry Free" Warranty is limited to replacement of the defective or worn-out product with the same (or comparable) product in accordance with this warranty. Under no circumstances will the obligation or liability of aFe exceed the purchase price of the product as indicated on the original bill of sale. Warranties are non-transferable, contain no cash value and are only extended to the owner of the vehicle provided that the ownership has not changed since the installation of the product. This warranty does not apply to products which have been altered, modified, damaged from neglect, abuse or from an accident, misused, improperly installed, contaminated with dirt or other contaminants, or used in applications other than recommended in our printed or digital media. aFe does not provide reimbursements for delay, shipping fees, labor, mileage, or any other costs involved in installation or re-installation of the products in guestion.

Registration Process:

Simply register your DFS Fuel System product online at http://www.aFepower.com/reg

Claim Process:

To file a warranty claim, customers are required to submit their information using the warranty claim form online at http://afepower.com/inquiries/tech-warranty.php

All Warranty Claims require: 1) Online registration of the product. 2) If item has not been registered online, then a copy of your original purchase receipt is required. 3) An image of the warrantied part. 4) An image showing the serial number on the warranty card or the barcode label on the box. You may be required to return the part for inspection and you may be required to purchase a new replacement part while the warranty claim is being processed. Once the warranty claim has been reviewed and approved, aFe will provide you with a refund of the replacement purchase price. aFe's obligation under the "Worry Free" Warranty is limited to replacement of the defective or worn-out product (excluding finish) with the same (or comparable) product in accordance with this warranty. In addition this warranty does not cover fuel filters, which need to be replaced when worn. Warranty is valid provided aFe instructions for installation were properly followed.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



advanced FLOW engineering, inc. 252 Granite Street Corona, CA 92879

252 Granite Street Corona, CA 92879
TEL: 951.493.7100 ● TECH: 951.493.7100 x23
E-Mail:Tech@aFepower.com