

AEM INSTALLATION INSTRUCTIONS

Part Number: AE-07082

This filter fits: See catalog for current applications

With proper care, this filter will last the life of your vehicle. This filter may be used in a stock machine, and no modifications will be required. However there are special installation instructions, so please follow the procedures outlined below to ensure that the AEM® air filter seals properly.

INSTALLATION:

1. Remove the 4 screws securing the air filter bracket and remove the stock air filter. Retain the 4 screws from the stock air filter bracket, the hardware will be reused with the installation of the AEM® air filter in step 5.
2. Install AEM® air filter into the airbox with the filter top facing upward. **Fig. 1**
3. Evenly press the AEM® air filter into the airbox. **Fig. 2**
4. Place the plastic brackets into the grooves on the air filter's top. **Fig. 3**
5. Using the 4 screws removed during step 1, tighten the screws so the brackets snugly secure the brackets to the the airbox. **Fig. 4**

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

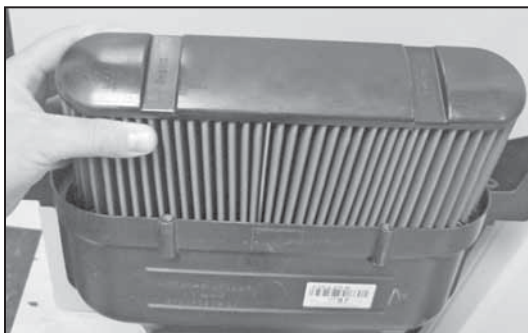


Fig. 1



Fig. 2

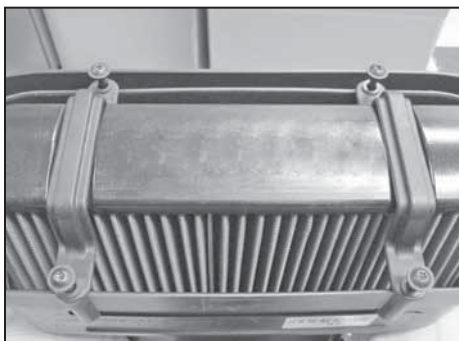


Fig. 3



Fig. 4