

TSB-229 VF Over-centre Spring Removal

VF Commodores use an over-centre spring to decrease the pedal effort required to operate the clutch pedal. If a driver finds the operation effort inconsistent or the pedal sticking to the floor during gear changes, the spring can easily be removed to improve the pedal feel and prevent the pedal sticking to the floor.



Remove the panel above the pedals to allow access to the spring.



A flat blade screw driver can be used to pry out the spring.

BE VERY CAREFUL NOT TO DAMAGE THE CLUTCH POSITION SWITCH ABOVE THE SPRING!







Spring removed from pedal assembly.



LEADING BRANDS











