



Magnum Force

Intake System Cover

PN: 54-11638-B (Black)

54-11638-CL (Clear)

Important!

Please read all instruction steps before you begin installation.


Make	Model	Year	Engine
Dodge	RAM 1500	2002-2015	V8-4.7L/5.7L HEMI

Step 1. Remove trim seal from housing ①.

Step 2. Remove only top (3) M6 screws from housing adaptor, keeping adaptor in place. Slide cover down on housing as shown.

Step 3. Reinstall the M6 screws back in place.

Your install is now complete!

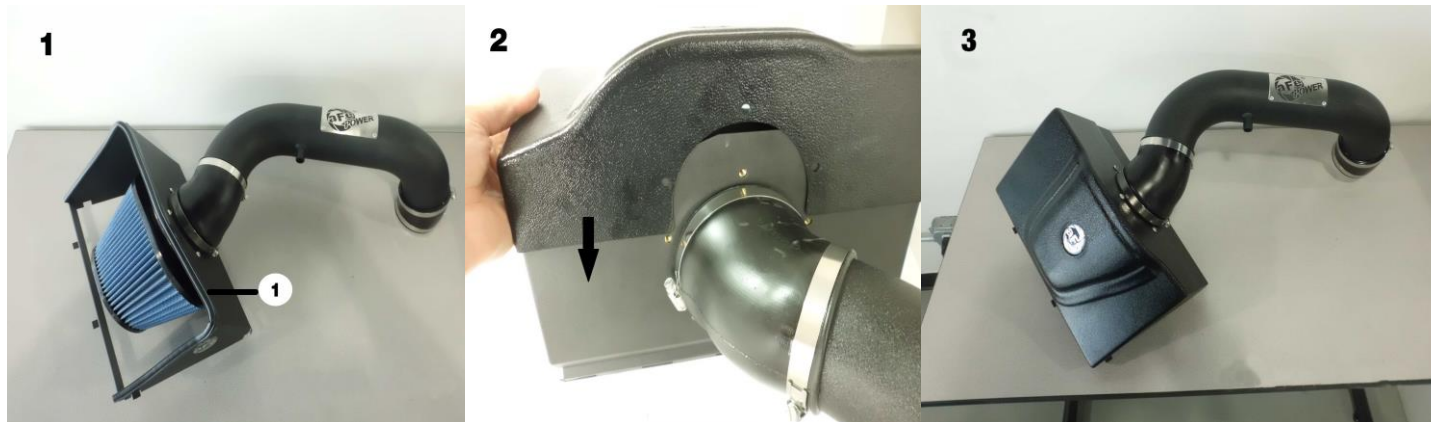

advanced FLOW engineering

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com