


BLACK SERIES AIR INTAKE SYSTEM



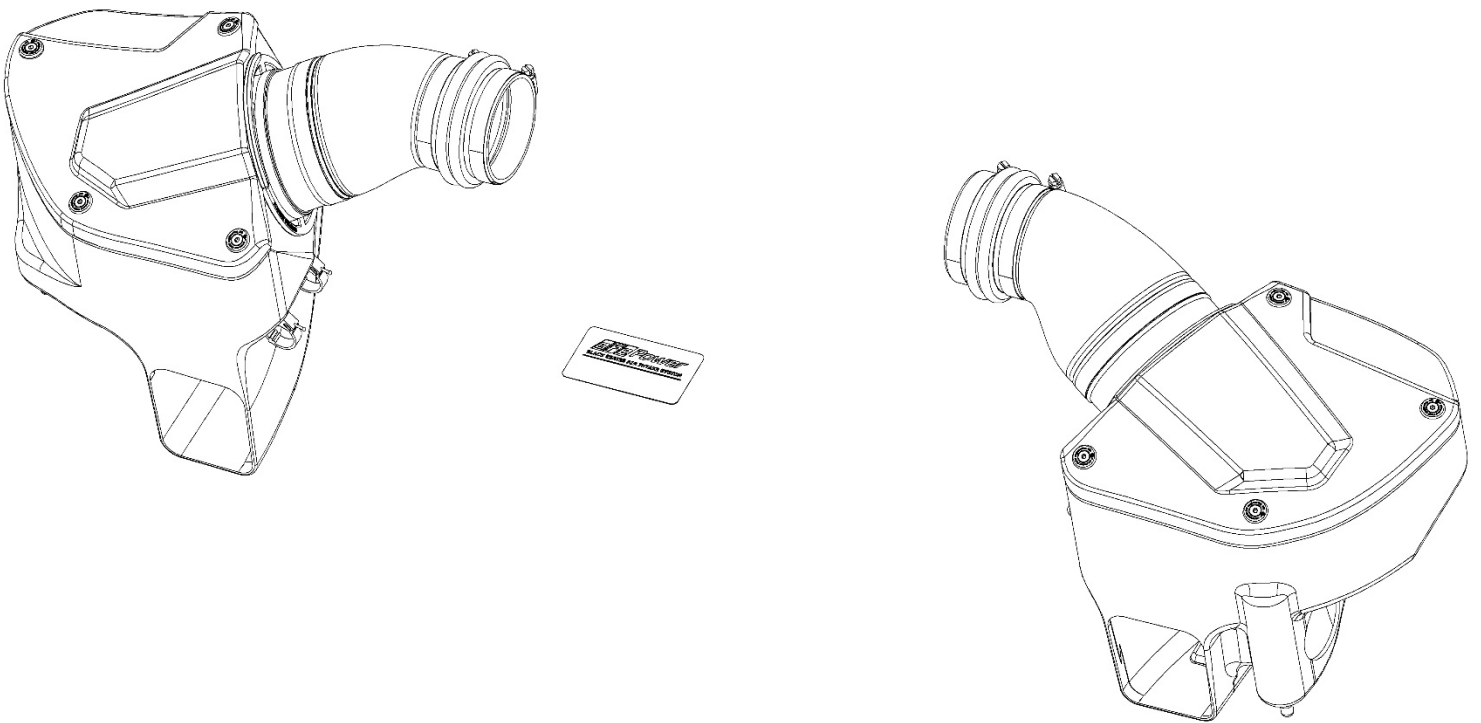


- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	2	Air Filter (Pro 5R)	24-90111
A2	2	Air Filter (Pro DRY S)	21-90111
B	1	Carbon Fiber Tube, Driver side	05-5810005C1
C	1	Carbon Fiber Tube, Passenger side	05-5810005C2
D	1	Housing, Driver side	05-5810005B3
E	1	Housing, Passenger side	05-5810005B4
F	1	Carbon Fiber Cover, Driver side	05-5810005C5
G	1	Carbon Fiber Cover, Passenger side	05-5810005C6
H	2	Bellow coupling: 3.25"ID x 2.5"L	05-01416
I	4	Clamp, 052 (2-13/16" - 3-3/4")	03-50008
J	8	Laser etched aFe POWER Screw: M6 x 12mm	03-50483
K	1	Black Series Plate	06-00142

Installation will require the following tools:

Panel clip remover, 6mm and 8mm nut driver, small flat-head screwdriver, 16mm and 18mm socket and driver or 3/8 ratchet., 3mm allen wrench.

Emissions Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

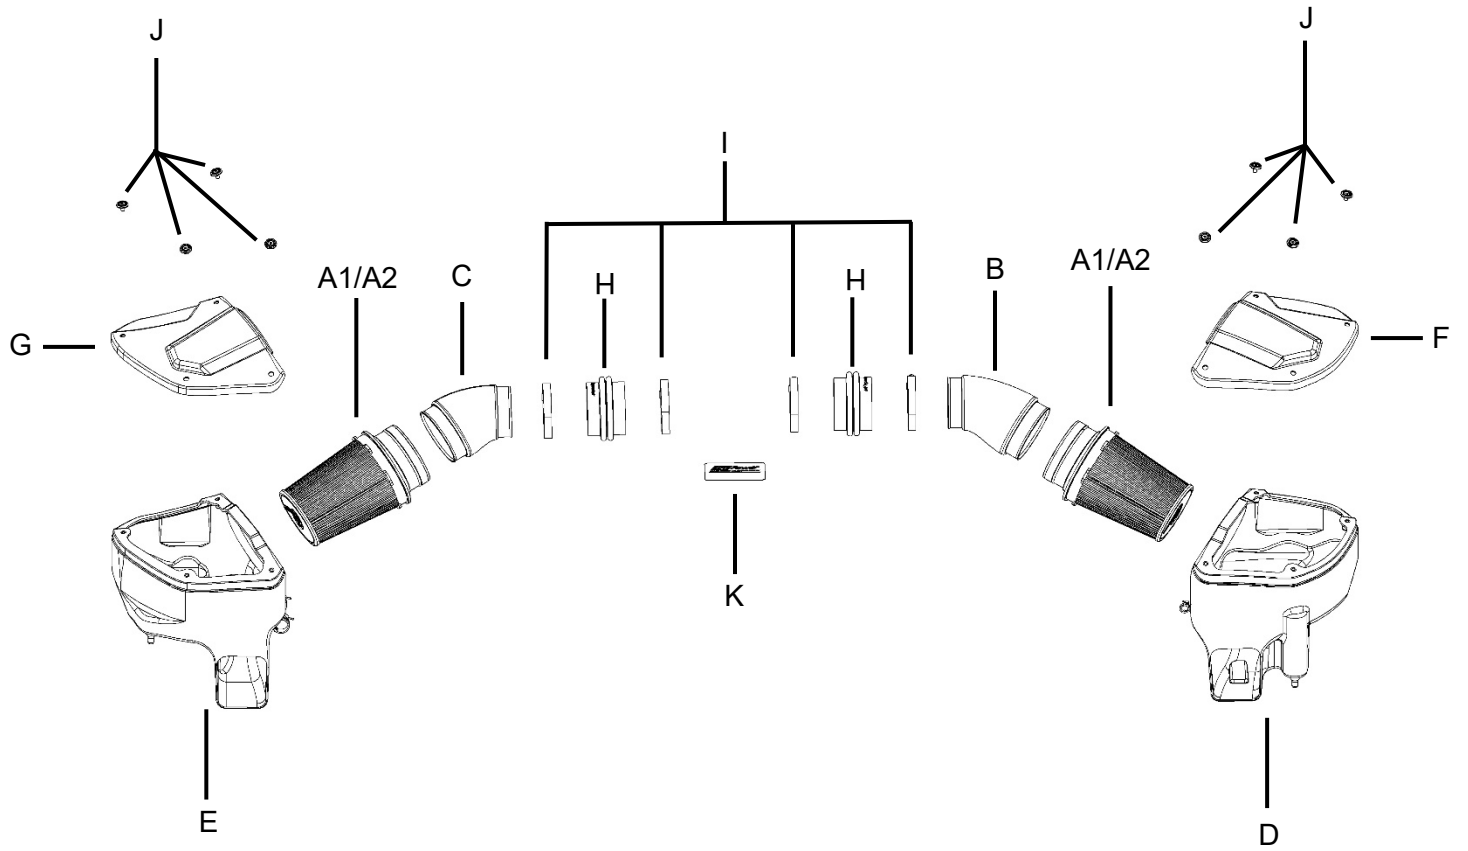

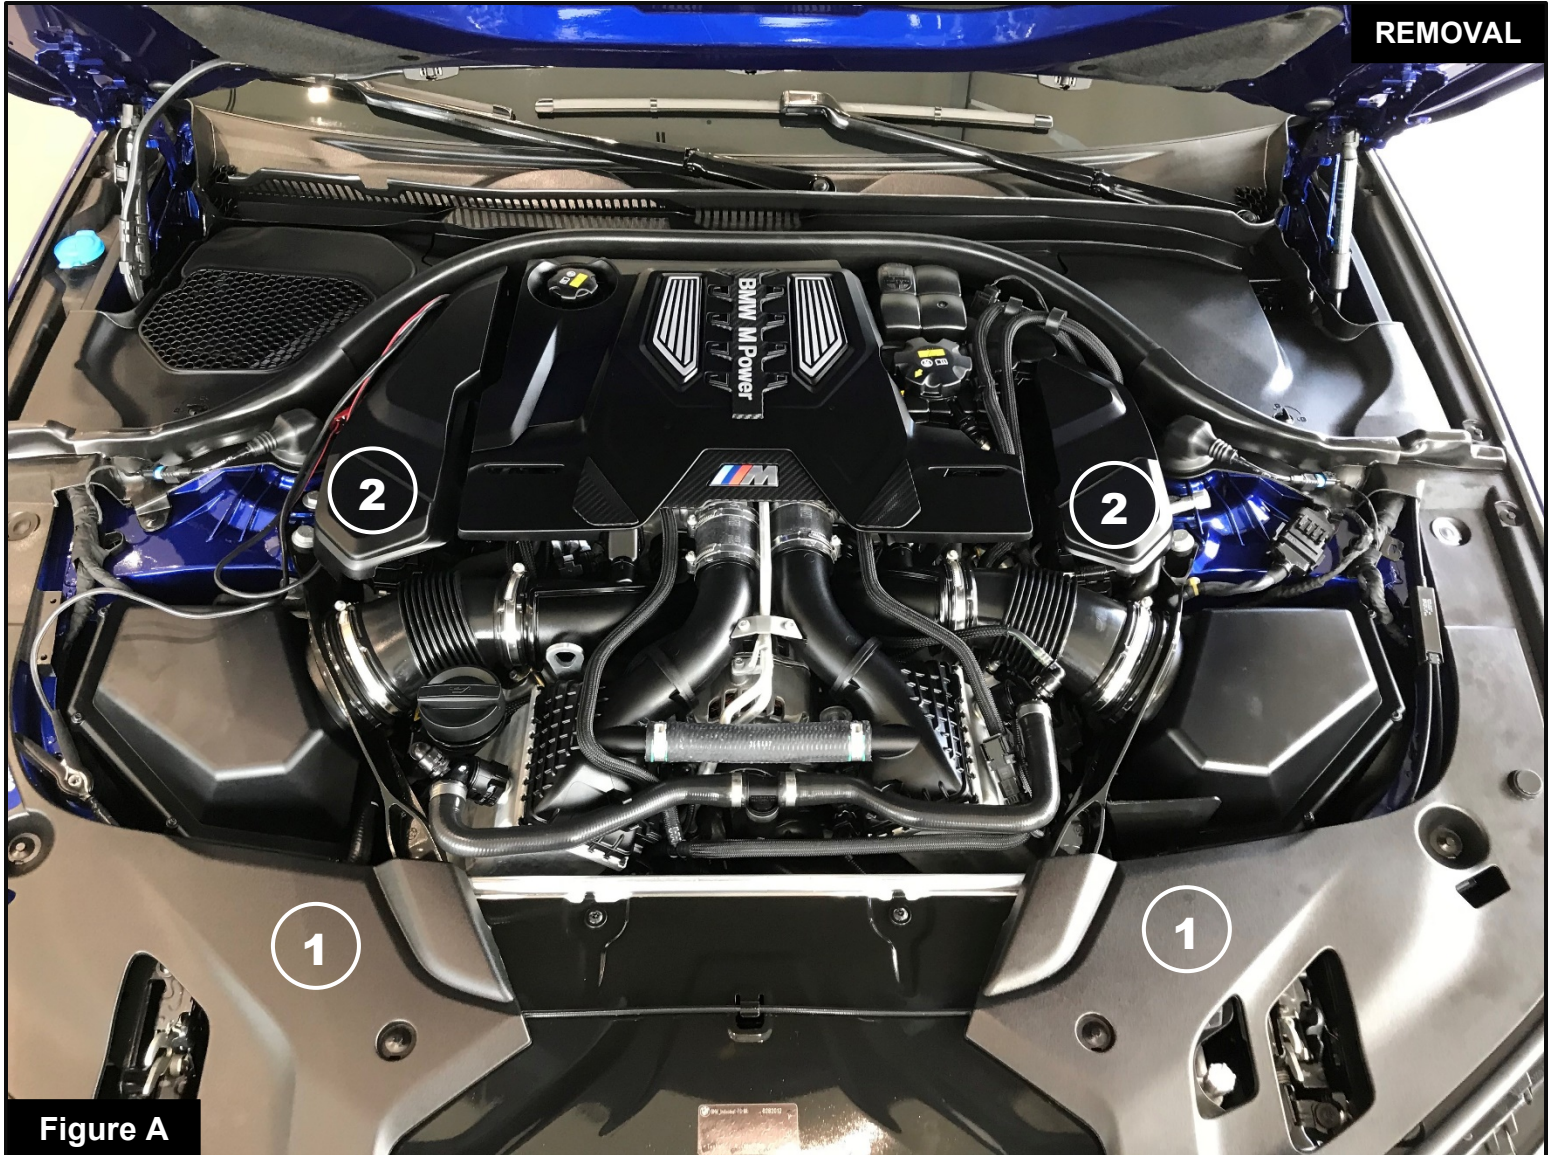


Figure A

Refer to Figure A for Steps 1-2

Step 1: Remove both engine compartment front covers (1) by removing the three push clips and sliding them out of the seal trims.

Step 2: Remove the two side engine covers (2) by simply pulling upward on them.

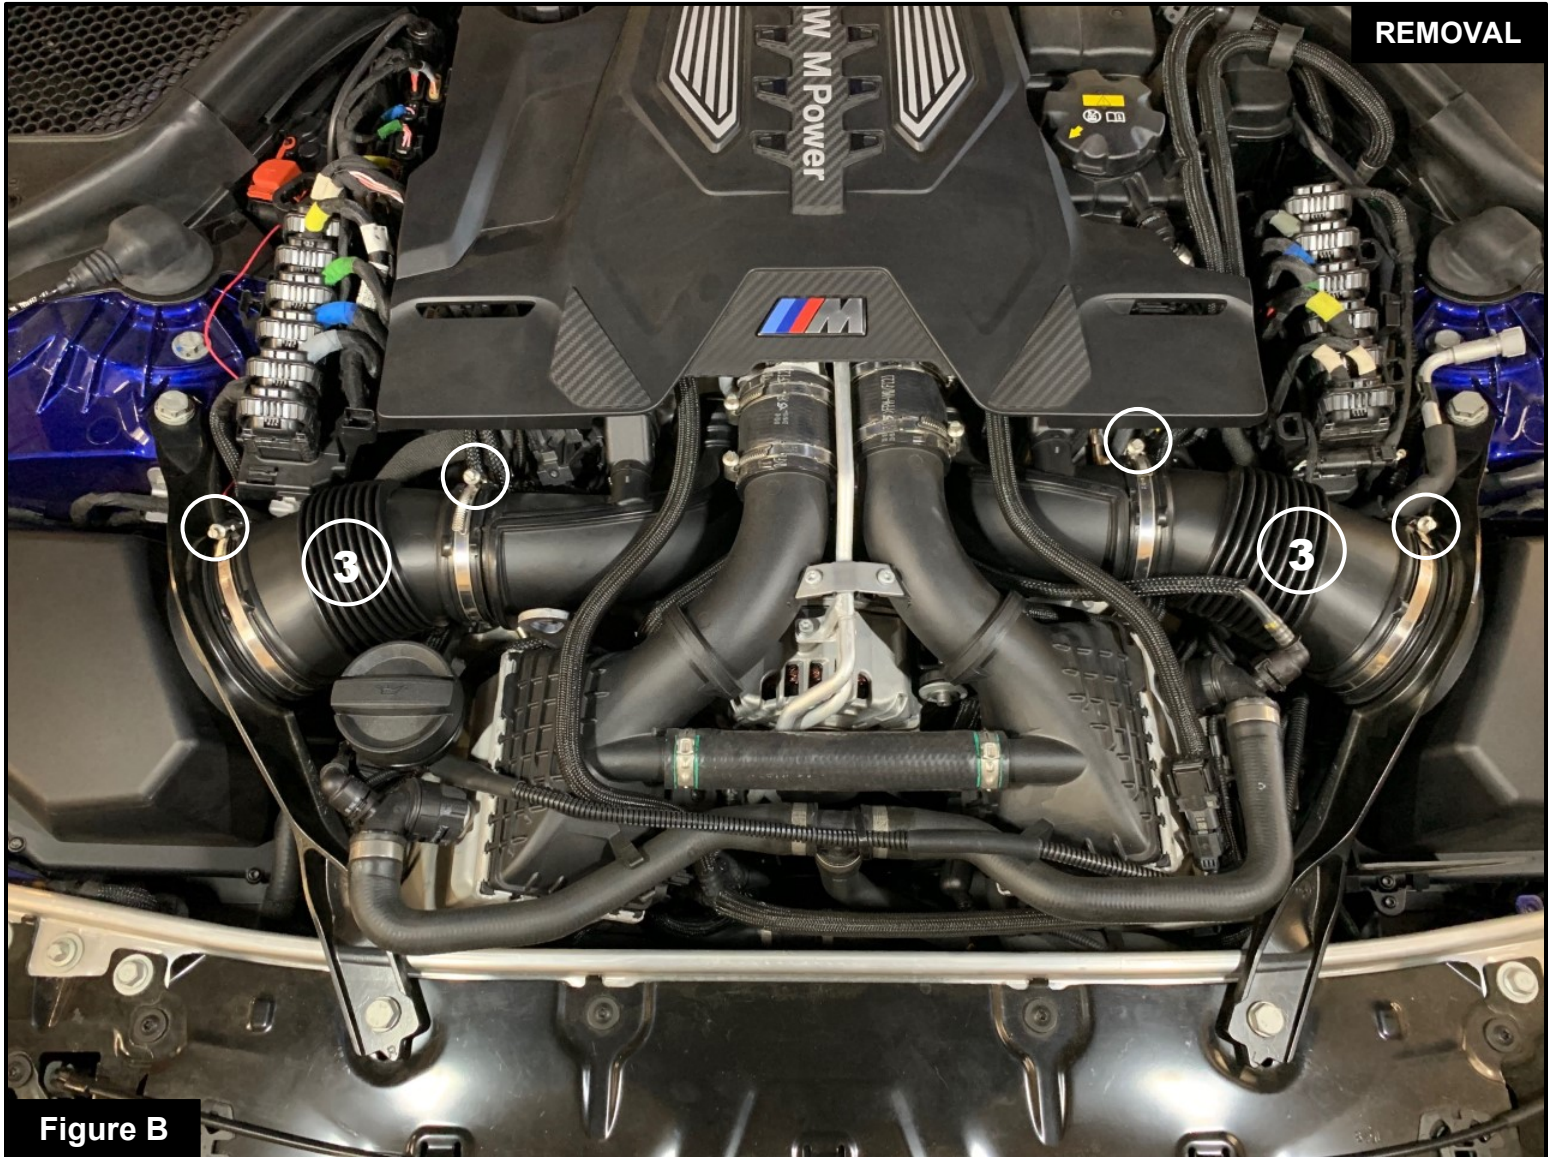


Figure B

Refer to Figure B for Step 3 - 4

Step 3: Untighten the 4 clamps securing the driver side and passenger side tubes.

Step 4: Compress the tubes (3) to get them out of the vehicle.

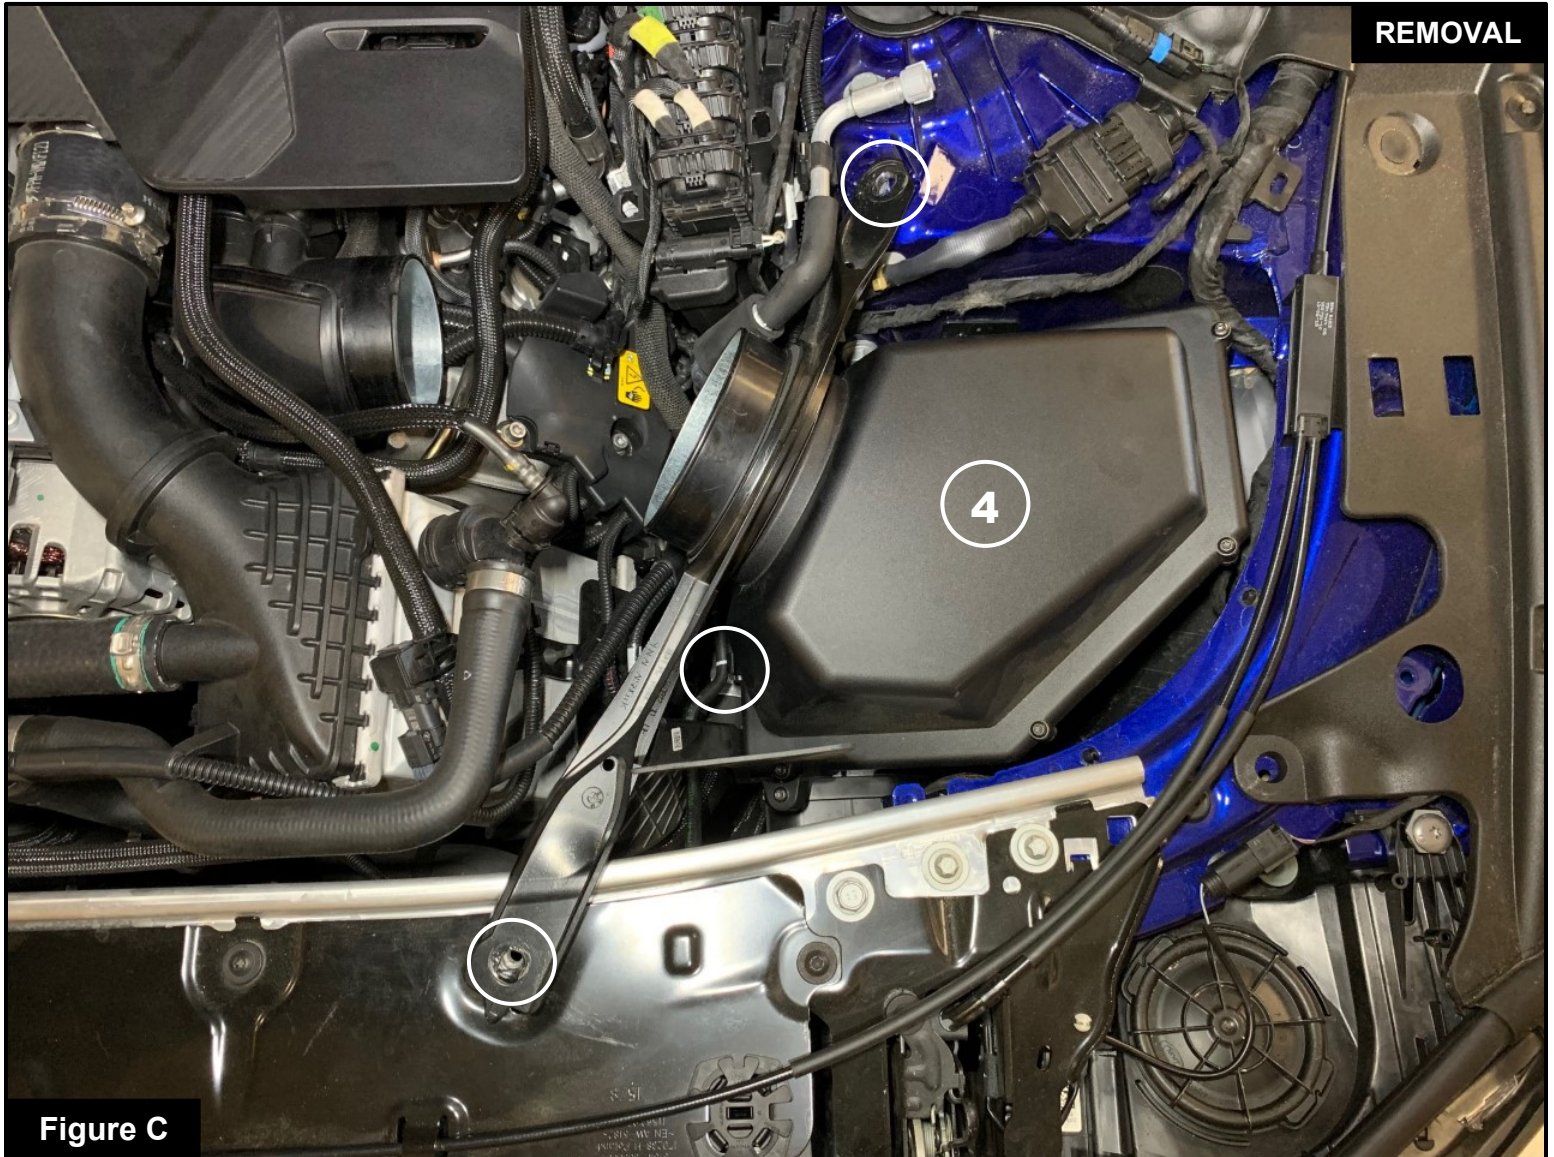


Figure C

Refer to Figure C for Step 5 -7

Step 5: Remove the screws securing the driver side brace. Use a 16mm socket for the front screw and a 18mm socket for the rear one.

Step 6: Unclip the small hose connected to the housing.

Step 7: Pull upward on the housing and brace assembly (4) to take it out of the vehicle.

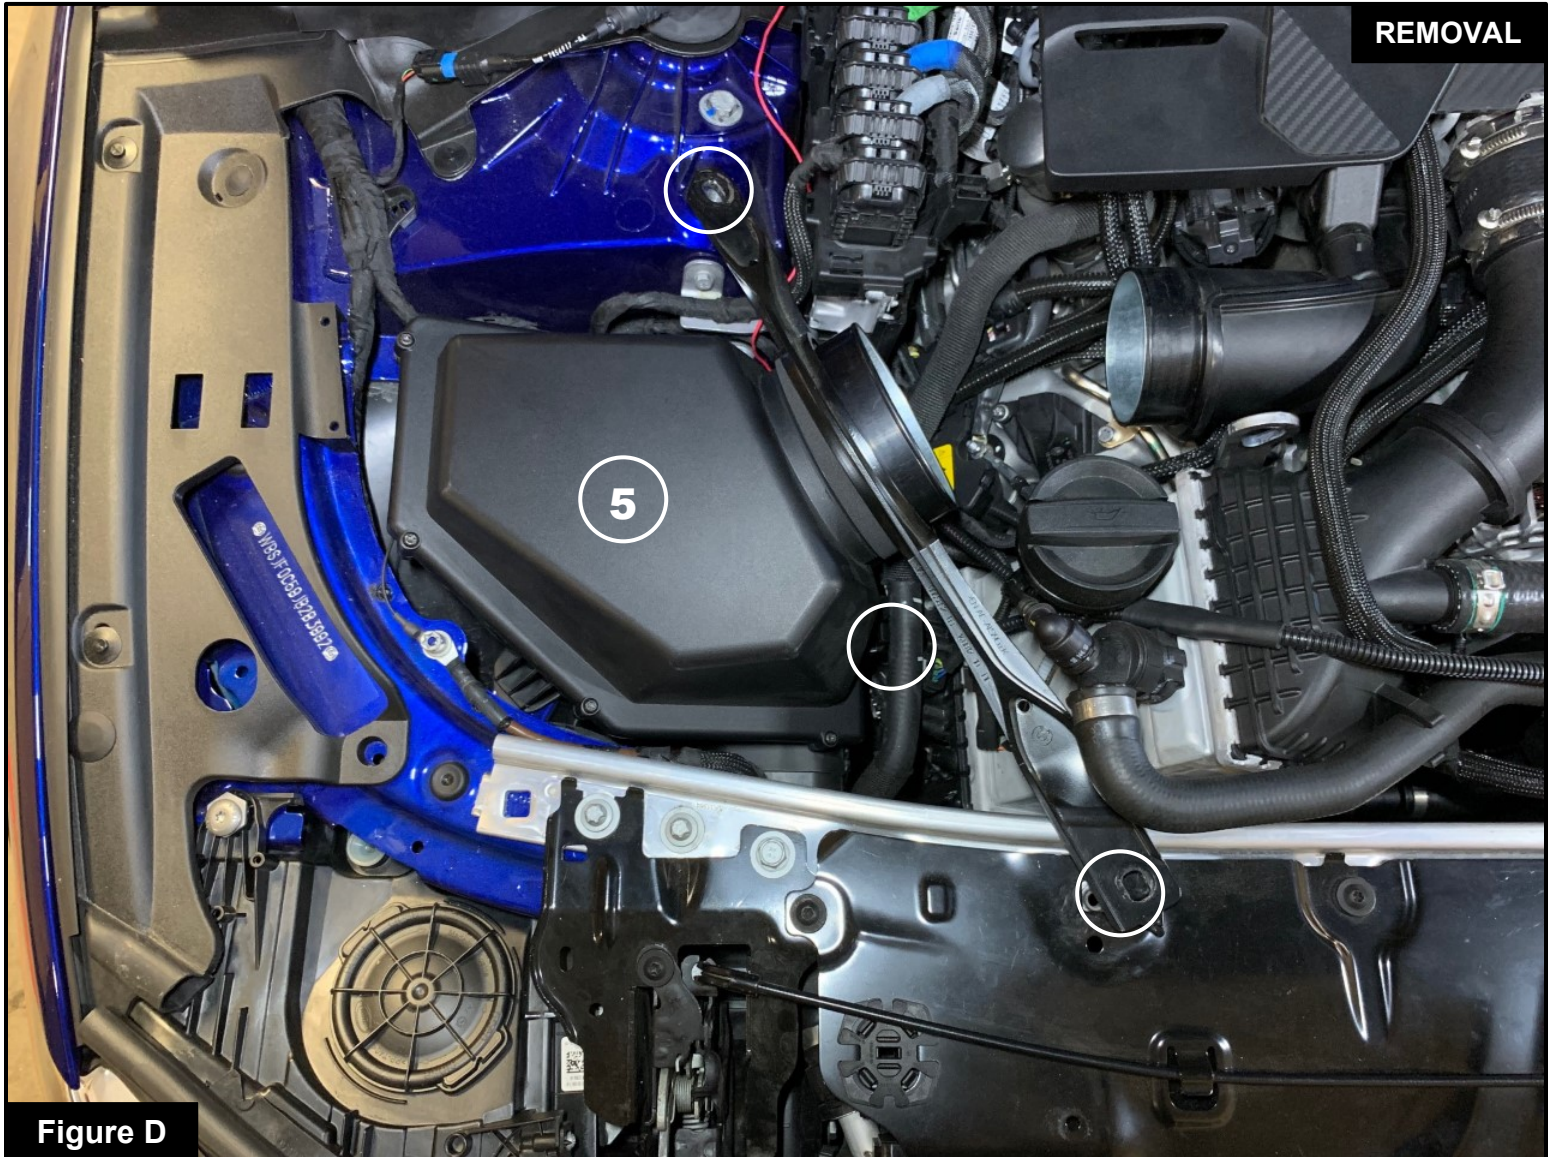


Figure D

Refer to Figure D for Steps 8

Step 8: Repeat the same steps for the passenger side. Start by removing the screws securing the brace, then unclip the hose attached to the housing. Then take the passenger side housing (5) and brace out of the vehicle.



Figure E

Refer to Figure E for Steps 9

Step 9: Install the aFe POWER air filters into the housings. Slide them from the outside and press them in until they lock into place.

**Figure F****Refer to Figure F for Step 10-11**

Step 10: Transfer the brace from the driver side factory housing to the driver side aFe POWER housing.

Slide the brace over the filter flange and press it until it locates between the beads.

Step 11: Repeat this operation for the passenger side housing. Make sure to keep the passenger side brace on the passenger side and the the driver side one on the driver side.

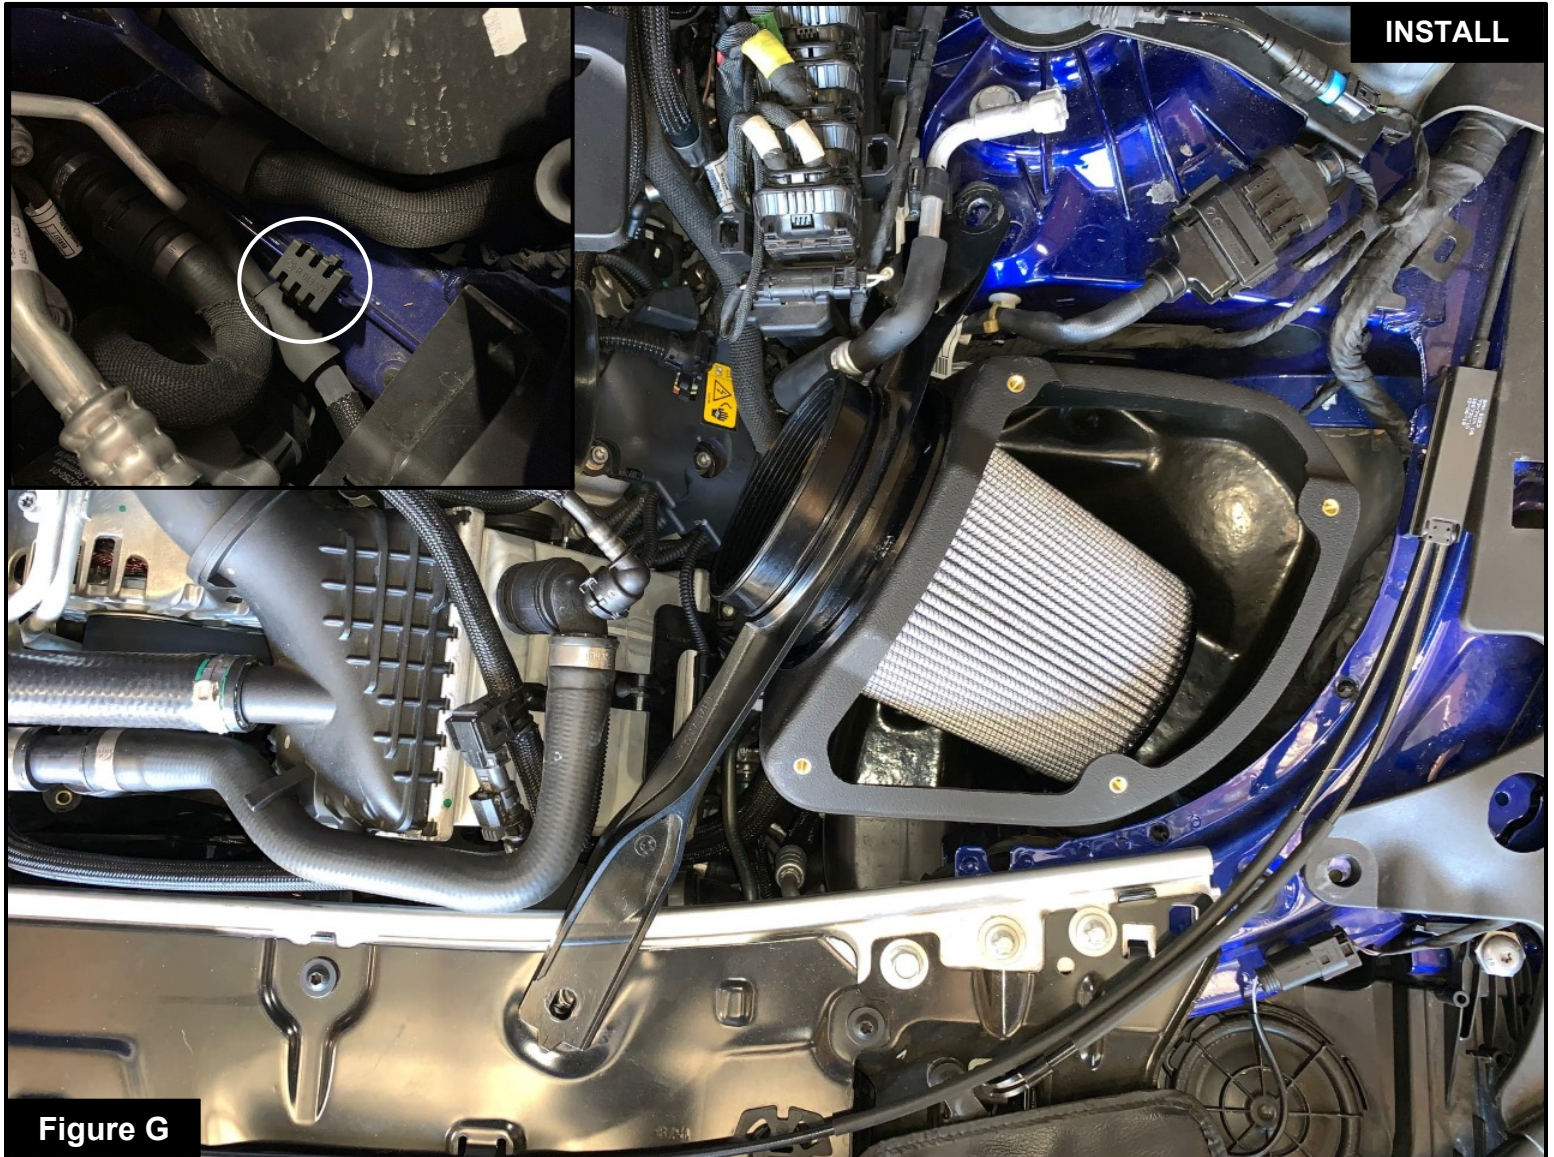


Figure G

Refer to Figure G for Steps 12-14

Step 12: Remove the rectangular grommet from the driver side factory housing and install it over the sheet metal like shown.

Step 13: Install the driver side housing/brace assembly into the vehicle. Press it firmly into the mounting grommets. Do not secure the brace with the screws yet to allow flexibility while installing the tube.

Step 14: Secure the small hose to the cable holder on the housing.

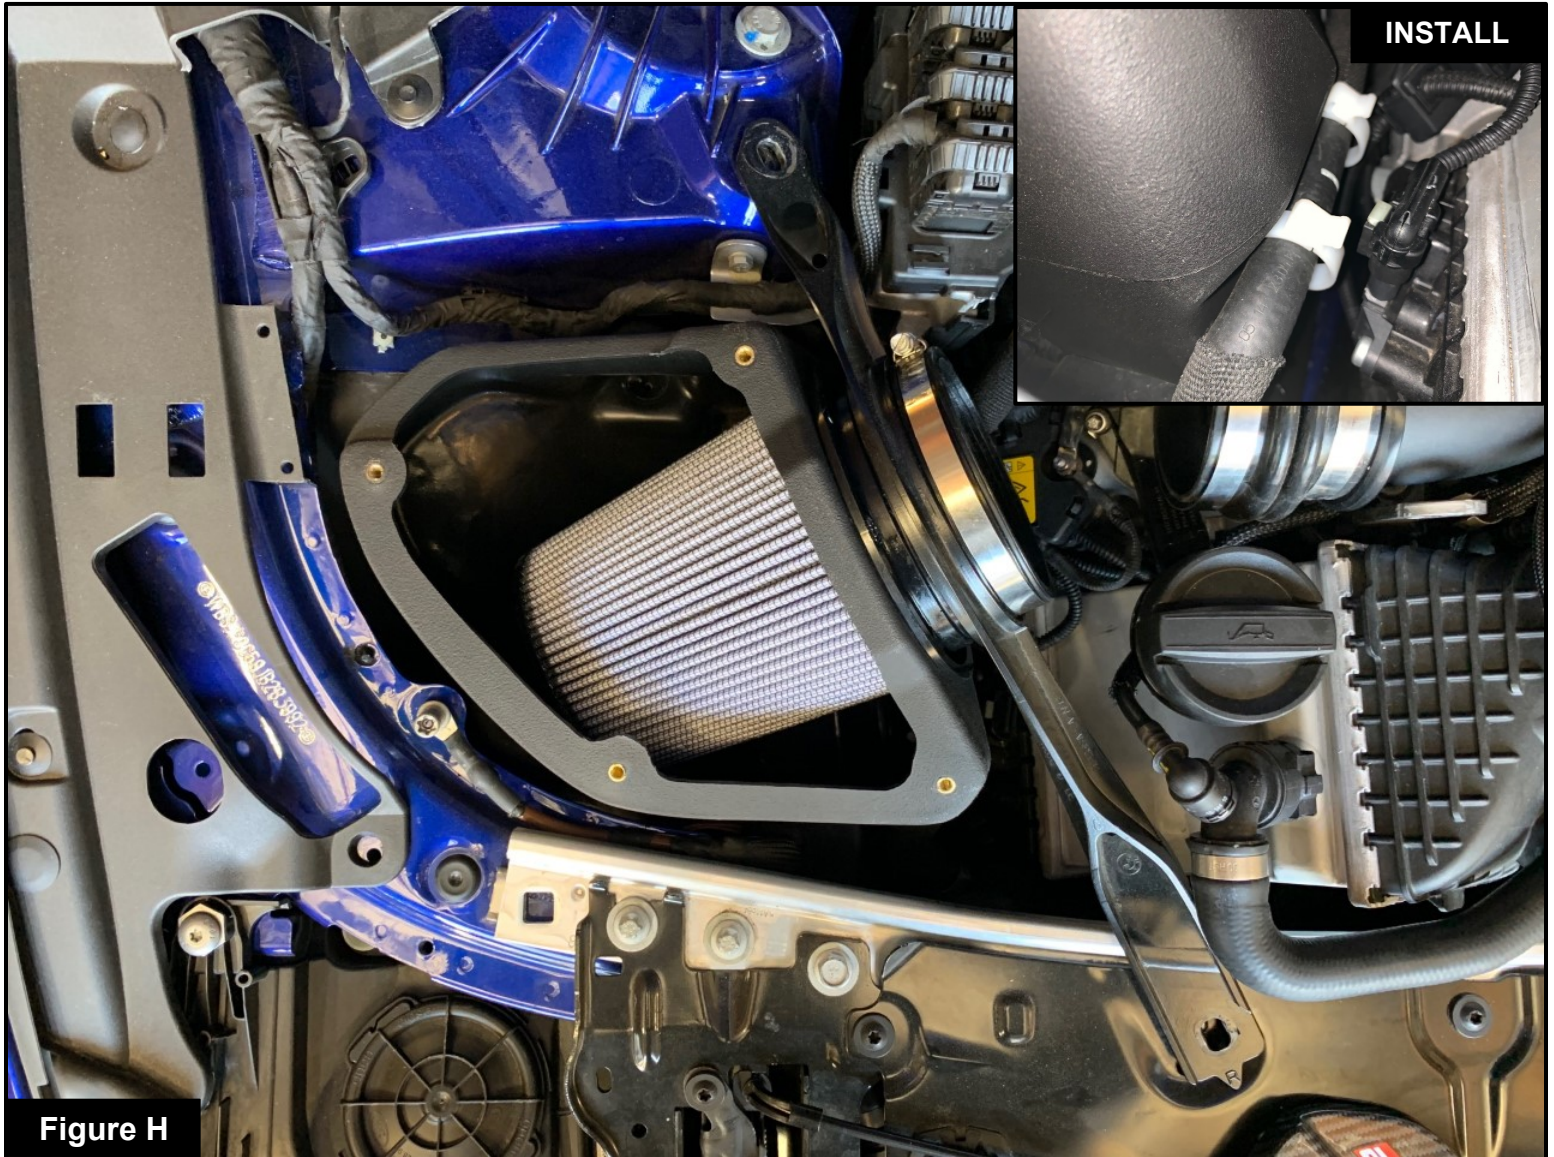
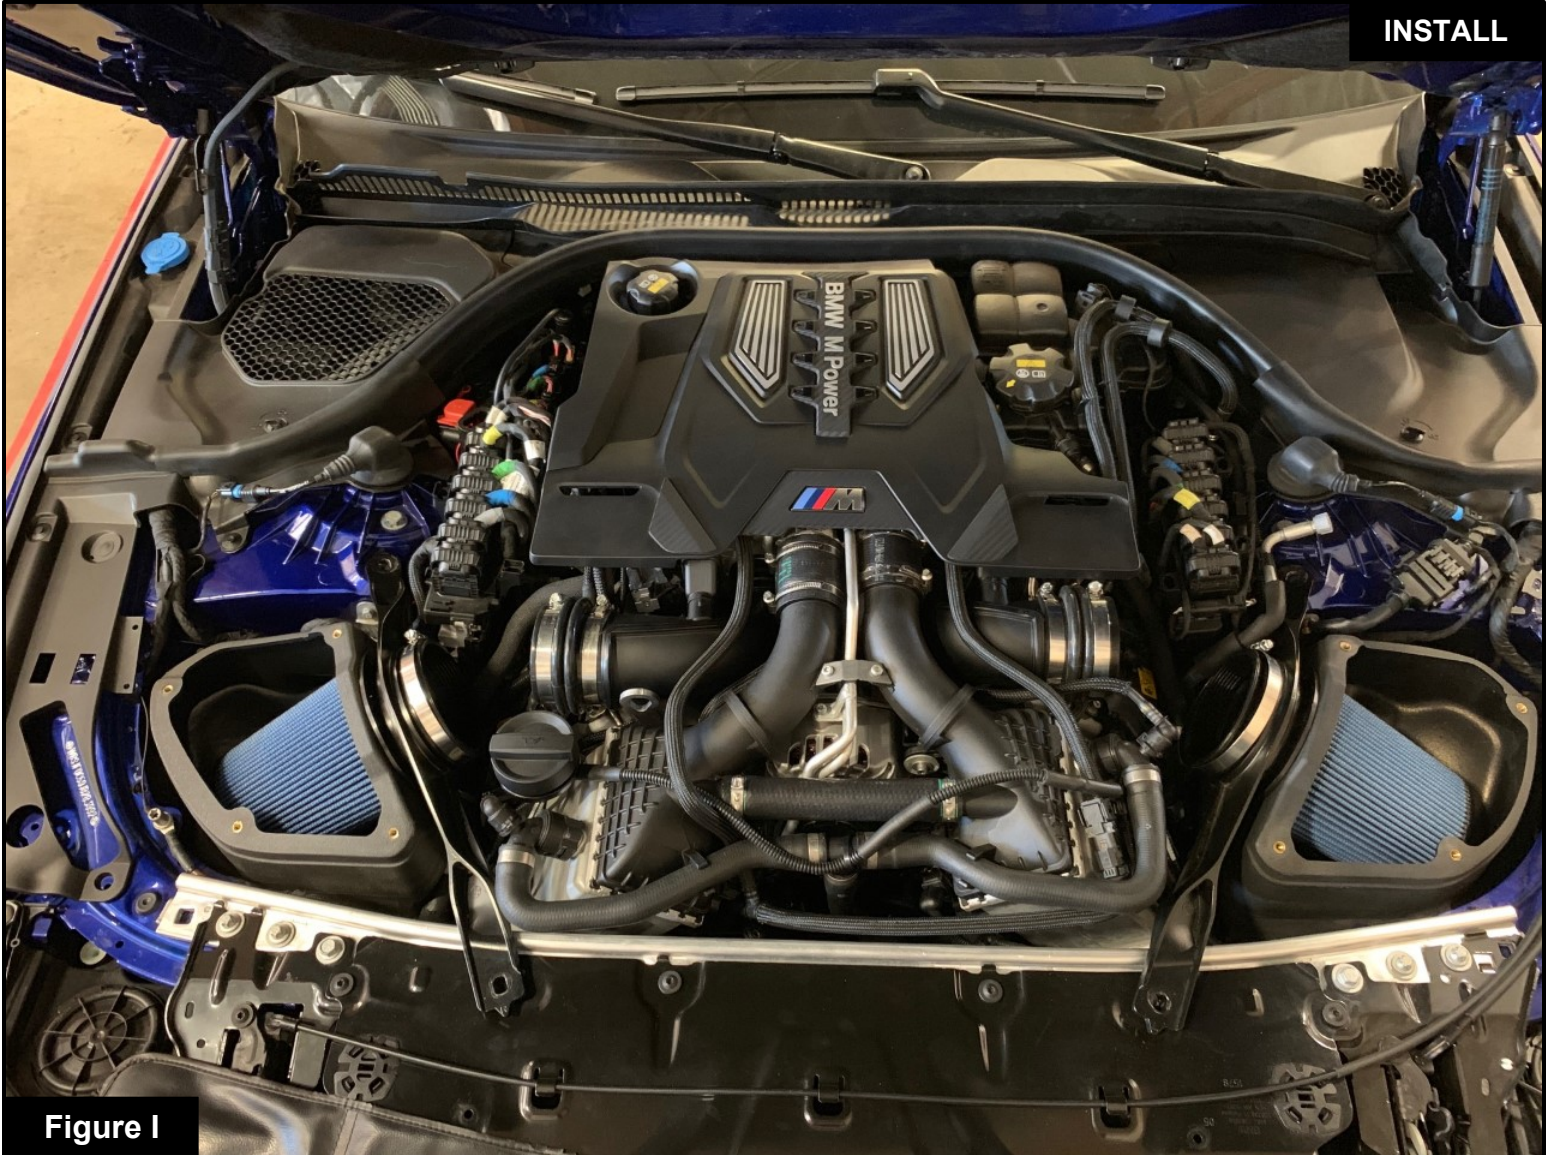


Figure H

Refer to Figure H for Steps 15-16

Step 15: Install the passenger side housing assembly into the vehicle and press it firmly into the factory grommet. Do not secure the brace yet.

Step 16: Secure the hose to the cable holders on the housing.

**Figure I****Refer to Figure I for Steps 17-18**

Step 17: Install the clamps over the air filters but to not tighten yet.

Step 18: Install the bellows couplings over the turbo inlet tubes. Install the clamps but to not tighten them yet to allow flexibility while installing the aFe POWER tubes.

**Figure J****Refer to Figure J for Steps 19-21**

Step 19: Slide the driver side tube into the driver side air filter then into the coupling. Align the parts correctly then tighten all clamps.

Step 20: Install the passenger side tube the same way and tighten all clamps after making sure all parts are aligned correctly.

Step 21: Secure both braces using the factory screws.

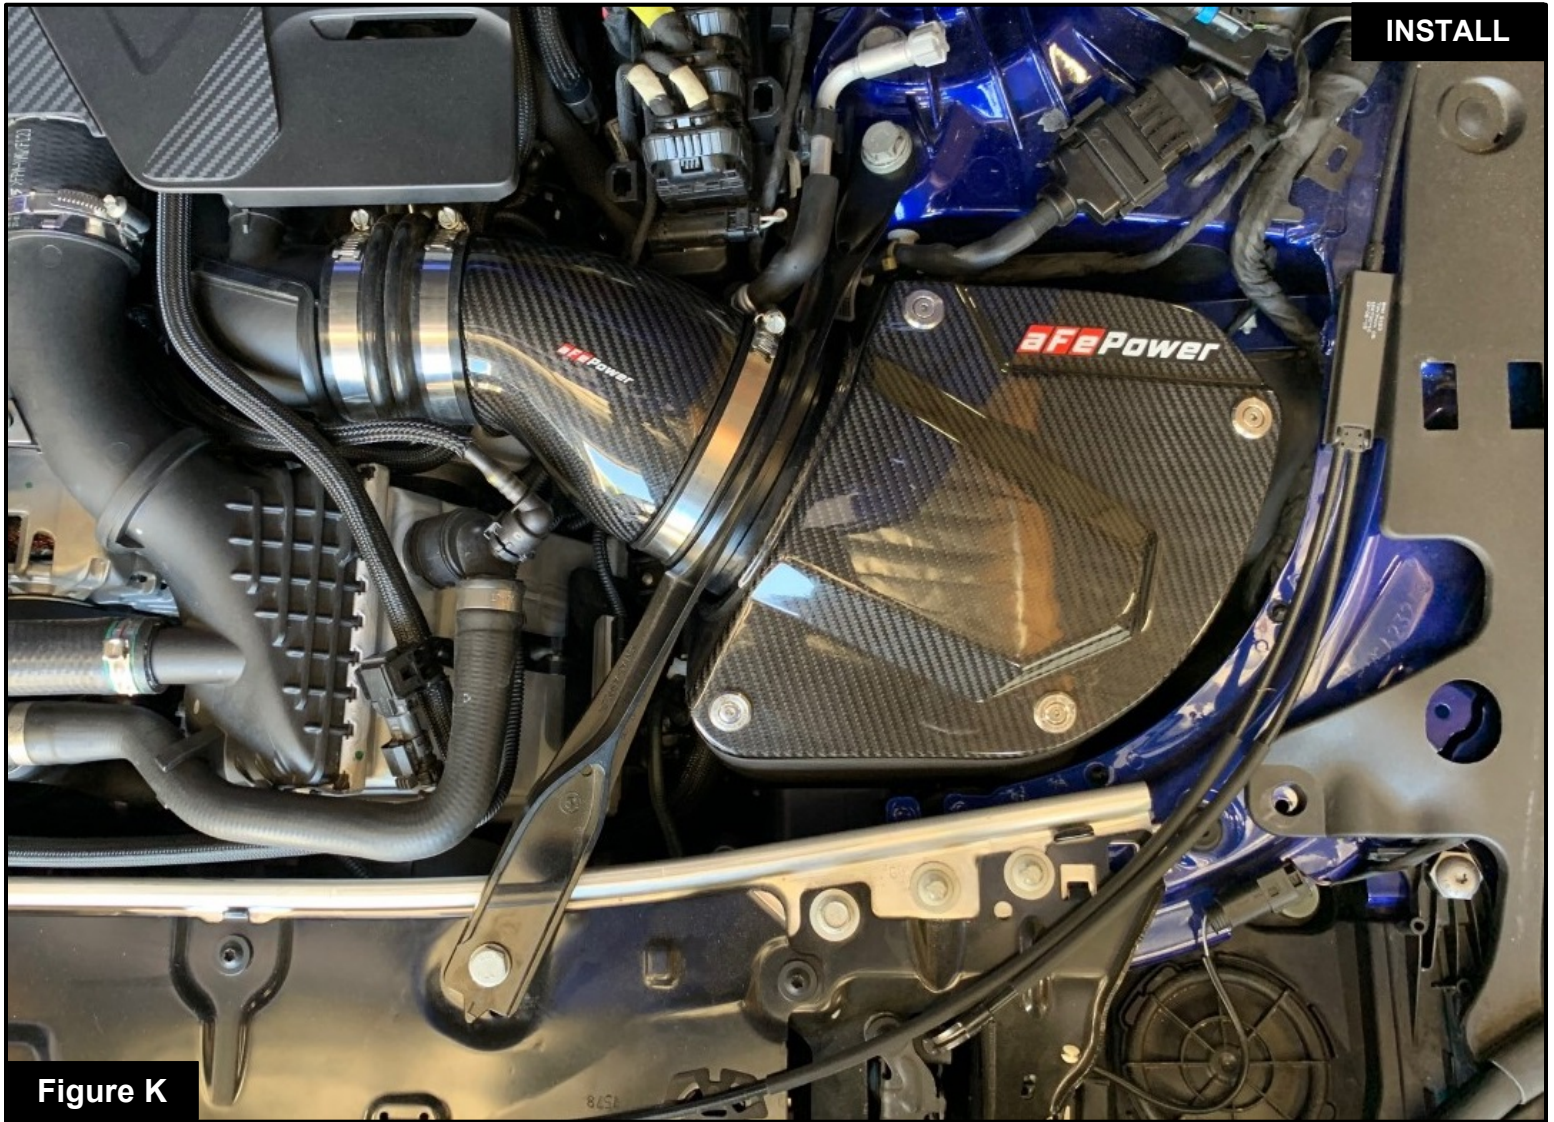


Figure K

Refer to Figure K for Steps 22

Step 22: Install the carbon fiber cover onto the driver side housing. Secure it using the provided aFe POWER screws.

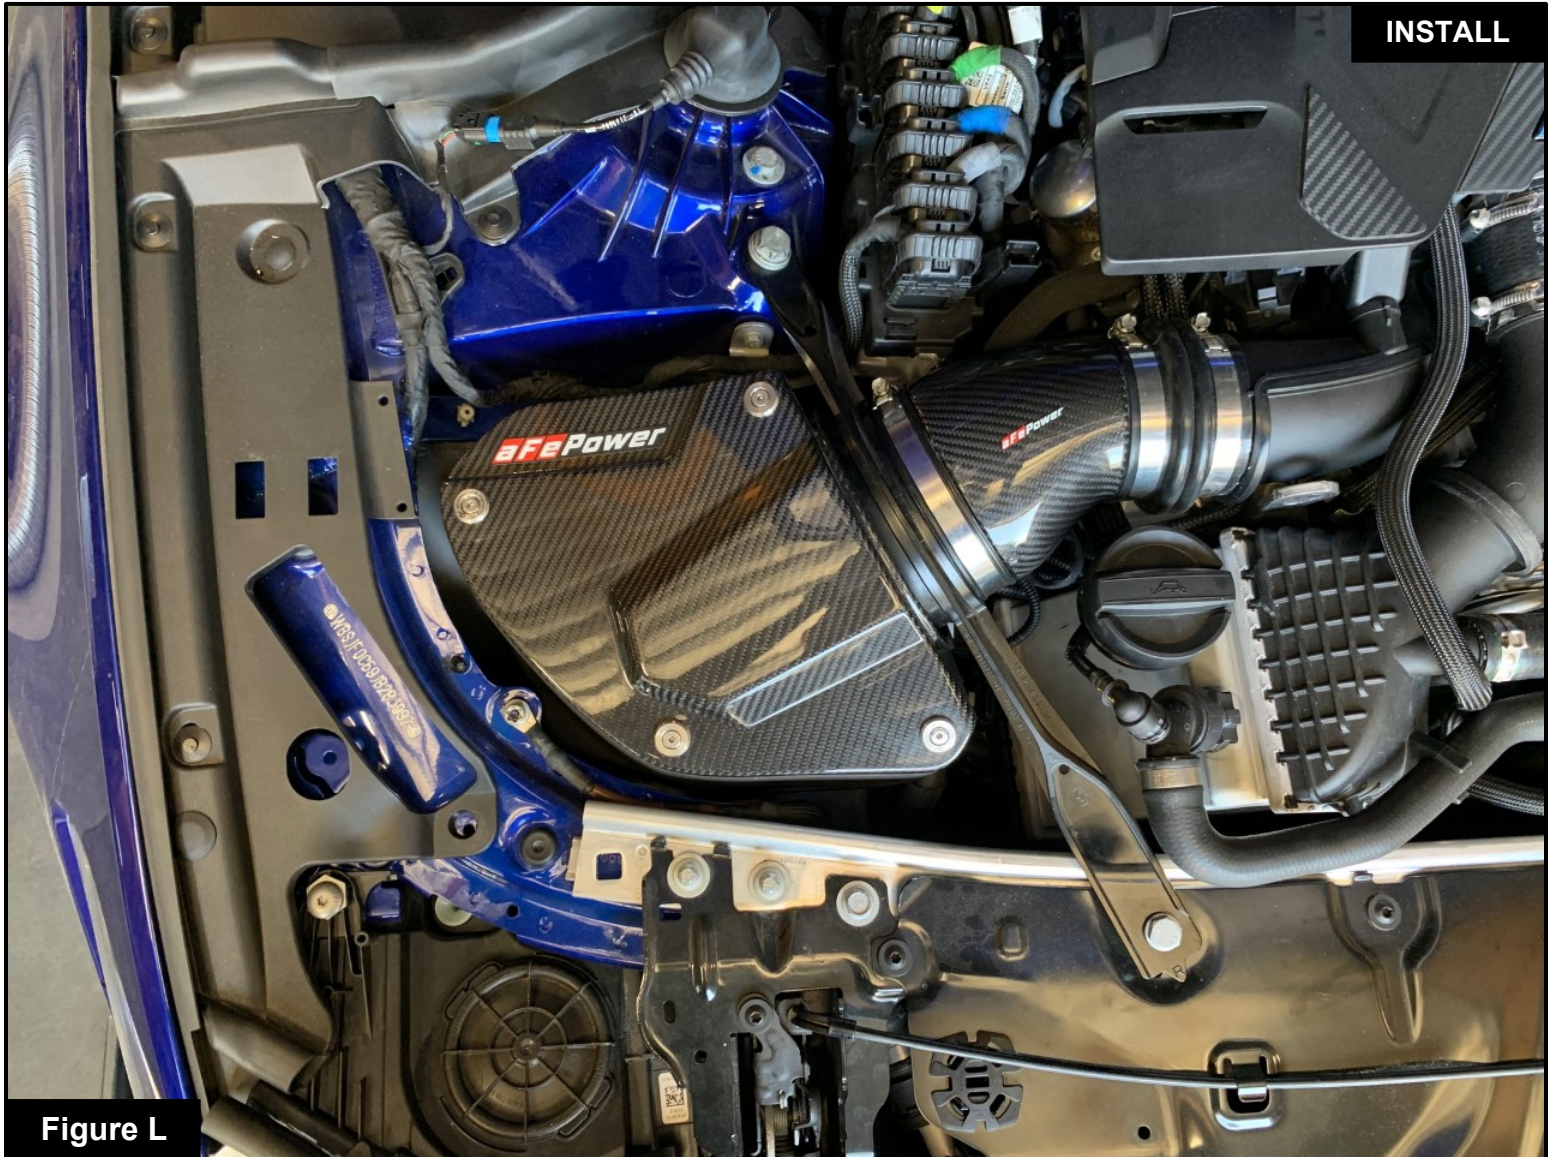


Figure L

Refer to Figure L for Steps 23

Step 23: Install the cover on the passenger side housing and secure it with the provided screws.

**Figure M****Refer to Figure M for Steps 24-26**

Step 24: Re-install the 4 covers taken off at step 1 and 2.

Step 25: Place the Black Series Plate where desired.

Step 26: Check all the components are tight and secure. Your installation is now complete. Thank you for choosing aFe POWER!

NOTE: Check all bolts, clamps, and connectors after 100-200 miles.

SOLD SEPARATELY



If you have also purchased the aFe POWER Carbon Fiber dynamic Air Scoops (P/N: 58-10005SC), follow the install instruction provided with the scoops to install them behind the grilles and guide the extra air flow to the air intake system.

Pro DRY S Air Filters



P/N: 21-90111-MA

Pro 5R Air Filters



P/N: 24-90111-MA

Pre-Filter



P/N: 72-91120

Pro DRY S Restore Kit



P/N: 90-59999

Blue Squeeze Restore Kit



P/N: 90-50501

Dynamic Air Scoops



P/N: 58-10005SC

SPRINT BOOSTER



P/N: 77-16304

SCORCHER BLUE Module



P/N: 77-86325

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com.



Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	20, 21, 23, 24, 72, TF	2 years
Air Intake Systems	50, 51, 53, 54, 55, 56, 57, 58, 75, TR, TA, TL, TM	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Turbochargers	46-6	2 years*
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*See turbocharger warranty for more info



advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879
TEL: 951.493.7100 • TECH: 951.493.7134
E-Mail: Tech@aFepower.com

P/N: 06-81286