



P.O. Box 1719
 Corona, CA 92878
 Support: 877-512-8111
www.aFeilters.com

Part #	10-10100 / 71-10100
Make:	Ford
Model	Year
F250	'03-'06
F350	'03-'06
F450	'03-'06
F550	'03-'06
Excursion	'03-'06
	V8-6.0L (TD)
	V8-6.0L (TD)
	V8-6.0L (TD)
	V8-6.0L (TD)
	V8-6.0L (TD)
	V8-6.0L (TD)

Tools Required:
 Knife

Parts List:
 1 Air Filter


Air Filter Installation Instructions - Ford F250/ F350/ F450/ F550/ Excursion V8-6.0L (TD) Power Stroke




Remove the intake system which includes the air filter. Separate the air filter from the intake system.



With a knife or sharp blade carefully cut along the edge of the OE air filter from the side opposite seal. Discard the air filter internals.

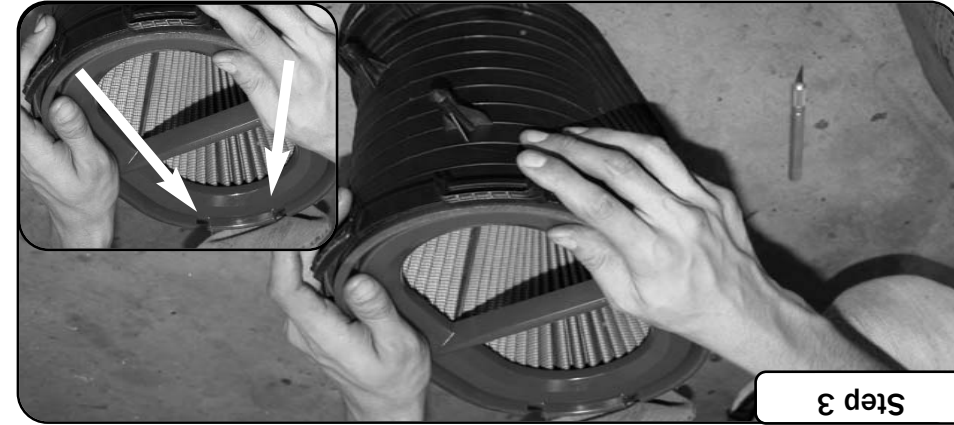

Carefully slide the air filter into the canister to the filter housing. Pay close attention to the alignment of the mounting slots relative to the filter housing.

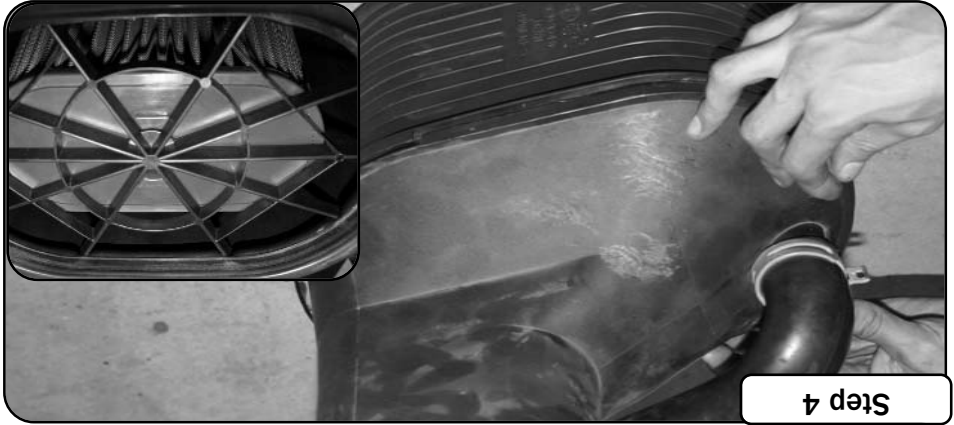

Re-assemble the air filter assembly. Verify engagement grooves are positioned as shown to ensure correct installation. Reinstall assembly back into engine.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze bottle oil