



Silver Bullet®

Throttle Body Spacer
PN 46-38005

INSTALLATION INSTRUCTIONS

IMPORTANT: Please verify the PARTS LIST below and read all instructions before you begin installation.

NOTE: This throttle body spacer was designed to fit with the stock intake system. Some modification may be necessary for aftermarket air intake systems.


MAKE/MODEL	YEAR	ENGINE
Toyota Sequoia	2008-2019	V8 5.7L
Toyota Sequoia	2008-2020	V8 4.6L
Toyota Tundra	2007-2019 (includes TRD Pro Series)	V8 4.6L
Toyota Tundra	2007-2019 (includes TRD Pro Series)	V8 5.7L
Toyota Land Cruiser	2008-2019	V8 5.7L
Lexus LX570	2008-2019	V8 5.7L
Lexus GX460	2010-2020	V8 4.6L

1. Remove the engine cover.
2. Locate and remove the air inlet tube from the air filter assembly and throttle body.
3. Remove the four (4) OE bolts from the throttle body. Lay the throttle body to the side. Remove the OE screen gasket.
NOTE: The OE screen gasket and bolts will not be needed for this install. You may want to keep in the event vehicle is returned to stock.
4. Install new, supplied O-ring into the OE air intake manifold groove.
5. Slip the Silver Bullet® throttle body spacer into the air intake manifold. Note that the "AIR IN" side of the spacer must face the throttle body, and must be oriented with the lettering right-side up. Place the new, supplied gasket between the throttle body and throttle body spacer. Secure with the new, supplied bolts and washers. Tighten the bolts to 10 Nm (89 In/in).
6. Re-install the OE air inlet tube to the throttle body and air filter assembly. Make sure to tighten all clamps and check all hoses. Then, re-install engine sight cover.


NOTE: This part has been exempt by the California Air Resources Board (C.A.R.B.) and issued an Executive Order (E.O.). If part does not come with C.A.R.B. E.O. sticker already placed on device, it is necessary to place the sticker on or near the device on a smooth, clean surface. The C.A.R.B. E.O. sticker is required to pass the smog test inspections in the state of California.




Step 1

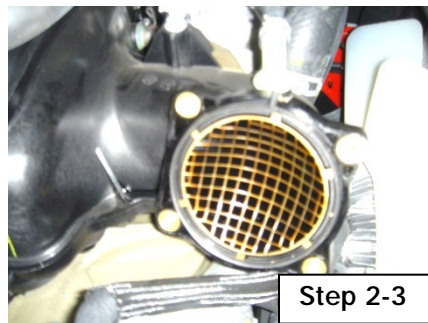


Step 2-3

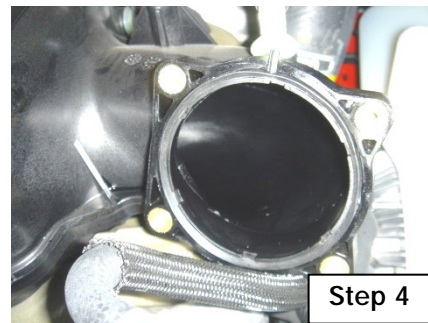

Step 4

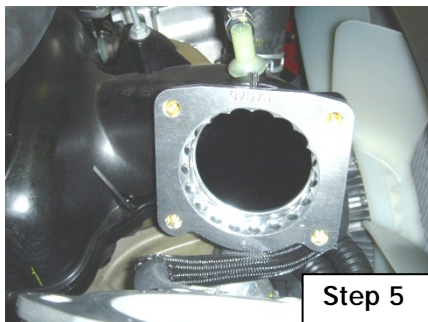

Step 5

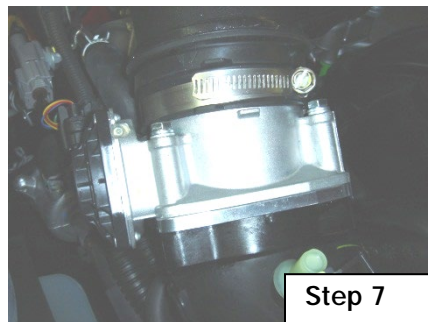

Step 7

Parts List

- 1 Silver Bullet Spacer
- 1 Gasket
- 1 O-ring
- 4 6mm x 55mm bolts
- 4 6mm flat washers
- 1 CARB EO sticker

advanced FLOW engineering, Inc.

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7185 M-F 7:00am-5:00pm PST; OR email Tech@afepower.com (send photos if helpful). All other calls, please use our main line at 951-493-7100

www.aFePower.com

Revised: 06-19-2020 CDS