

2019+ Chevy Silverado 1500 Trail Boss Mud Flap Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF121 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT PN MF121	SEE PAGE 3 DRAWINGS	PART DESCRIPTION	QUANTITY
MF121-LF		LEFT FRONT	1
MF121-RF		RIGHT FRONT	1
MF121-LR		LEFT REAR	1
MF121-RR		RIGHT REAR	1
BRACKET KIT PN BMF121			
BMF100		BRACKET	4
BMF68-RE		BRACKET 2	2
HARDWARE KIT PN HMF121			
1.5SS#6		SCREW	8
RACLP		CLIP	4
SMWASH		WASHER	8
SS6WASH		SMALL WASHER	8
SSLNUT		LOCK NUT	2

FRONT FLAP Turn steering wheel towards installation side to access interior wheel well. **Do not fully tighten fasteners until flap is fully aligned to vehicle.**

Bracket/Hardware 1 x Flap → 1 x BMF68-RE; 1 x BMF100; 2 x 1.5SS#6; 2 x SMWASH; 2 x SS6WASH; 1 x SSLNUT



FIGURE A Remove fasteners 1 & 2.

FIGURE B Temporarily remove fastener 3. Place BMF68-RE over mount 3, then reinstall fastener.

FIGURE C/D Place logo-side of flap facing vehicle rear and BMF100 over flap. Install SMWASH, SS6WASH & 1.5SS#6 into mounts 1 & 2 and SSLNUT & SMWASH onto mount 4. Gently curve bottom section of BMF100 towards flap.

FIGURE E Align flap to even ground. Tighten fasteners until washers just seat against flap.

2019+ Chevy Silverado 1500 Trail Boss Mud Flap Installation Instructions

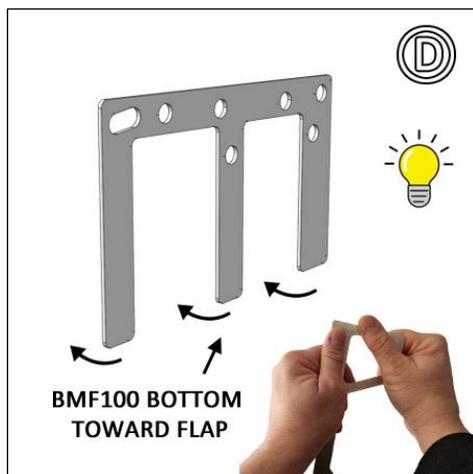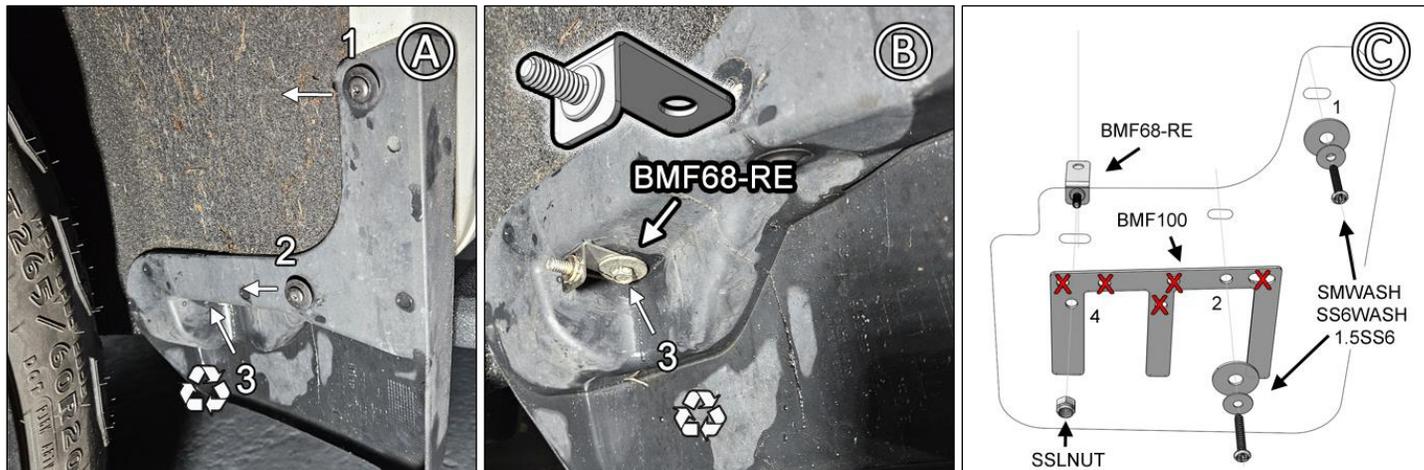

REAR FLAP Do not fully tighten fasteners until flap is fully aligned to vehicle.

Bracket/Hardware 1 x Flap → 1 x BMF100; 2 x 1.5SS#6; 2 x RACL; 2 x SMWASH; 2 x SS6WASH

FIGURE F Remove fasteners 1 & 2.


FIGURE G Place logo-side of flap facing vehicle rear and BMF100 over flap. Install 1.5SS#6, SS6WASH & SMWASH into mounts 1 & 2. Align flap to even ground before securing top section with 2 x RACL.

FIGURE H Tighten fasteners until washers just seat against flap.

IMF121



2019+ Chevy Silverado 1500 Trail Boss Mud Flap Installation Instructions

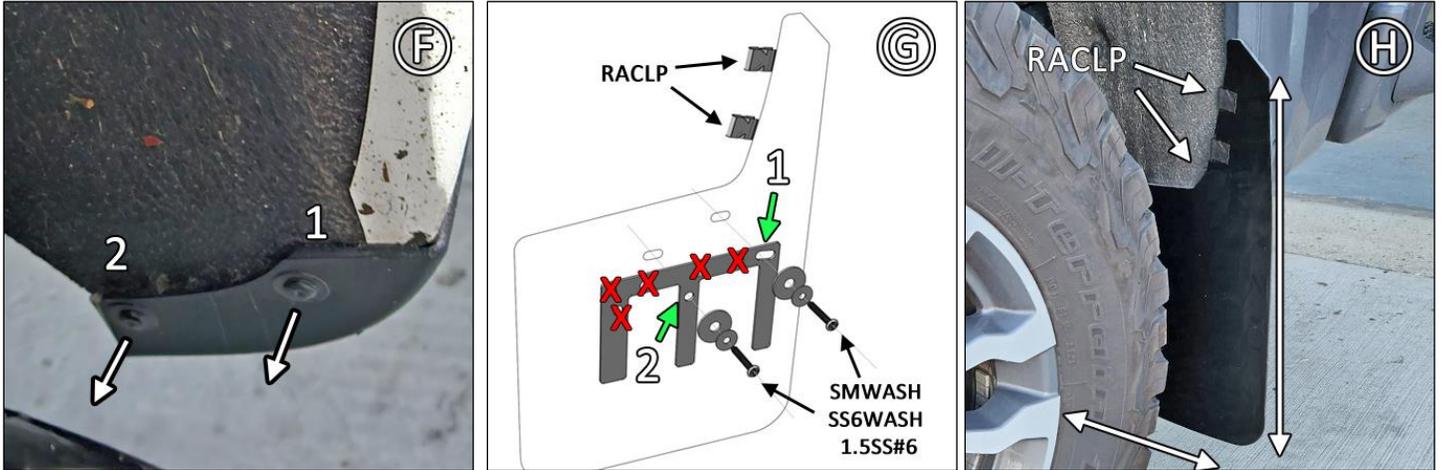

FRONT

MF121 MOUNTING DIAGRAM

REAR

