


Deatschwerks Ford F-150 Lightning X3 Hanger Plumbing Diagram (CPE #6-621)

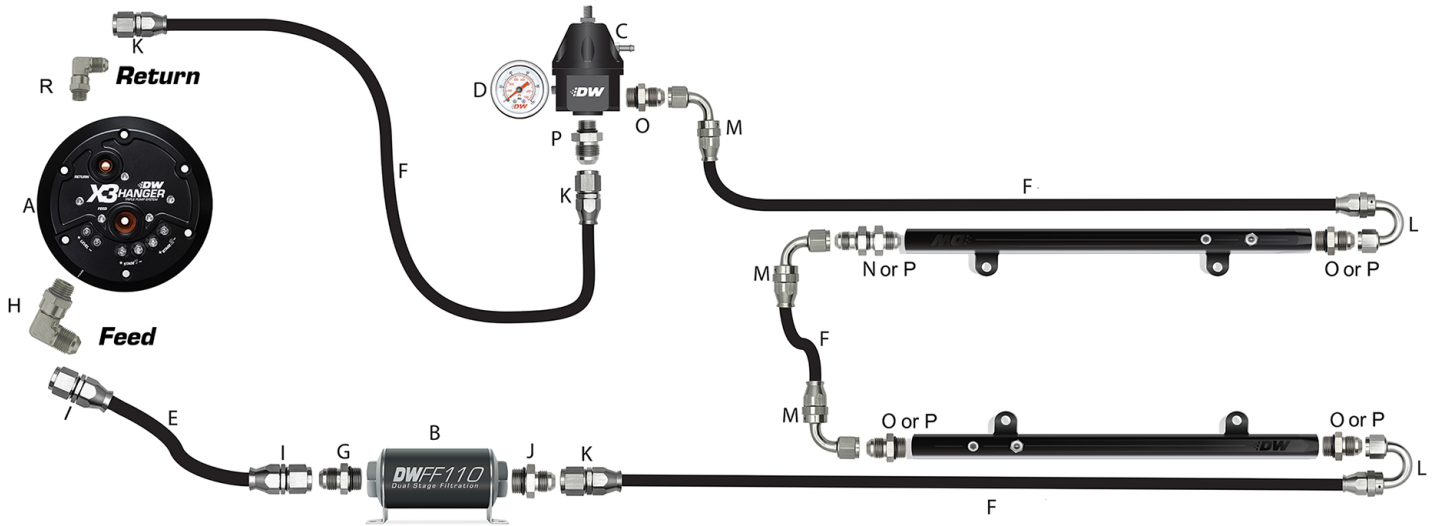

Part Number Guide

Fuel System Components

A. 9-xxx-7031	DWX3 Hanger
B. 8-03-110-010K	DWFF110 Fuel Filter
C. 6-1000-FRB	DWR1000 AFPR
D. 6-01-G	Fuel Pressure Gauge

Lines:

E. 6-02-0814-xx	10AN CPE Hose
F. 6-02-0813-xx	8AN CPE Hose


Fittings:

G. 6-02-0403	10AN ORB to -10AN Flare
H. 6-02-0411	8AN ORB to -8AN Flare 90-Degrees
I. 6-02-0809	10AN Straight Hose End CPE
J. 6-02-0406	10AN ORB to -8AN Flare
K. 6-02-0805	8AN Straight Hose End CPE
L. 6-02-0808	8AN 180-Degrees Hose End CPE
M. 6-02-0807	8AN 90-Degrees Hose End CPE
N. 6-02-0709	8AN Flare to -8AN Flare Bulkhead Adapter
O. 6-02-0402	8AN ORB to -8AN Flare
P. 6-02-0405	6AN ORB to -8AN Flare
R. 6-02-0412	8AN ORB to -8AN Flare 90-Degrees



WWW.DEATSCHWERKS.COM
 415 E. Hill Street, Oklahoma City, OK 73105
 (405) 217-0701 Toll Free (800) 419-6023

Deatschwerks Ford F-150 Lightning X3 Hanger Plumbing Diagram (PTFE #6-622)

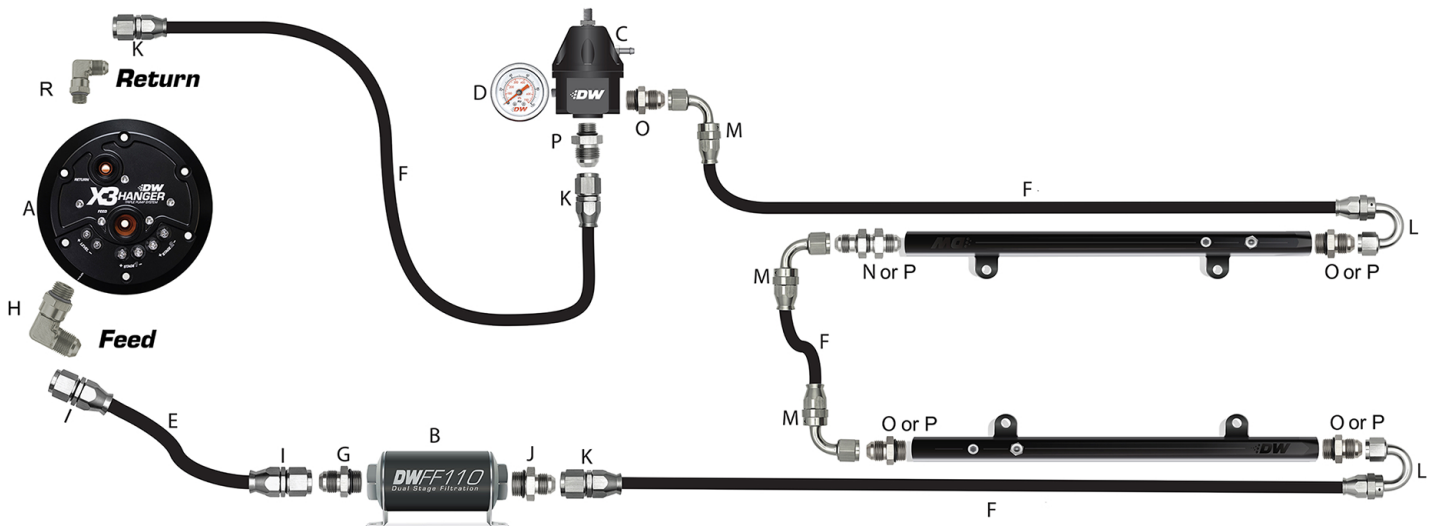

Part Number Guide

Fuel System Components

A. 9-xxx-7031	DWX3 Hanger
B. 8-03-110-010K	DWFF110 Fuel Filter
C. 6-1000-FRB	DWR1000 AFPR
D. 6-01-G	Fuel Pressure Gauge

Lines:

E. 6-02-0866-3	10AN PTFE Hose
F. 6-02-0865-20	8AN PTFE Hose

Fittings:

G. 6-02-0403	10AN ORB to -10AN Flare
H. 6-02-0411	8AN ORB to -8AN Flare 90-Degrees
I. 6-02-0858	10AN Straight Hose End PTFE
J. 6-02-0406	10AN ORB to -8AN Flare
K. 6-02-0854	8AN Straight Hose End PTFE
L. 6-02-0857	8AN 180-Degrees Hose End PTFE
M. 6-02-0856	8AN 90-Degrees Hose End PTFE
N. 6-02-0709	8AN Flare to -8AN Flare Bulkhead Adapter
O. 6-02-0402	8AN ORB to -8AN Flare
P. 6-02-0405	6AN ORB to -8AN Flare
R. 6-02-0412	8AN ORB to -8AN Flare 90-Degrees



WWW.DEATSCHWERKS.COM
 415 E. Hill Street, Oklahoma City, OK 73105
 (405) 217-0701 Toll Free (800) 419-6023