

## TSB-173 Multi-Drilled Flywheels


Please note this kit contains a multi-drilled flywheel. Multi drilled flywheels have multiple pressure plate bolt patterns on them to suit different clutch kits. It is important to check which holes to use for your particular clutch kit before fitting the dowels/installing the clutch.

Lay the pressure plate on the flywheel and rotate it until all dowel holes and bolt holes correspond with holes on the flywheel.

Check the following:

- Pressure plate bolt holes all align to a threaded hole.
- Pressure plate bolts are the correct thread for the aligned holes.
- You select the correct dowel size to suit both the pressure plate and flywheel.

Please note some kits will come with a range of different dowel sizes. When you have the correct dowels, knock them into the correct holes using a hammer.

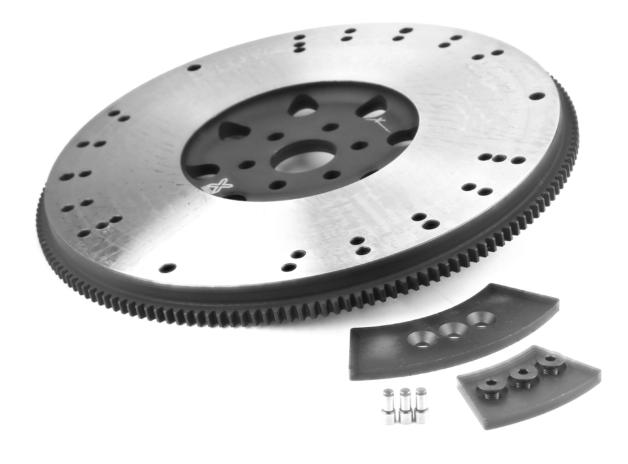





For further support, please contact your distributor and/or visit our website.

TREME OUTBACK

AU site: australianclutch.com.au US site: xclutchusa.com

XCLUTCH ACCLUTCH

TACSI